

## EMA-TT-W002


### REPLACEMENT TOOL

<p>1 TT-W002-PU08</p>	<p>2 TT-W002-PU10</p>	<p>3 TT-W002-PU12</p>	<p>9 TT-W002-POM01</p> <p>^ Plastic ring</p>	<p>10 TT-W002-BTM06</p>	<p>13 TT-W002-STA</p>			
<p>4 TT-W002-PU15</p>	<p>5 TT-W002-PU17</p>	<p>6 TT-W002-PU20</p>	<p>7 TT-W002-PTM10</p>	<p>8 TT-PT-M12 (For 20mm puller)</p>		<p>11 TT-NUTM1030</p>	<p>12 TT-CAP-M10150</p>	
<p>^ Bearing puller</p>			<p>^ Puller spreader</p>		<p>^ Nut / Bolt</p>		<p>^ Fixed fixture</p>	

### BEARING EXTRACTION


#### Step 1

Select the correct bearing puller

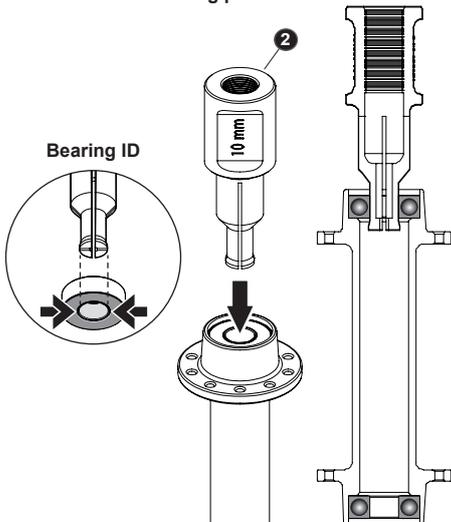


#### Step 2

Connect puller spreader

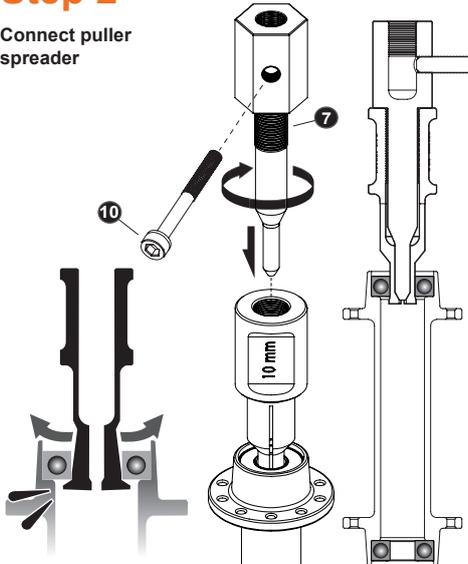


#### Step 3

Fixed on the fixture and screw M10 bolt into puller spreader

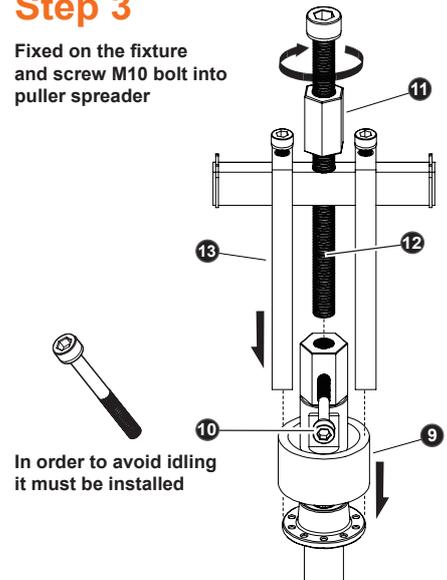

#### Step 4

Screw M10 nut to pull out Bearing

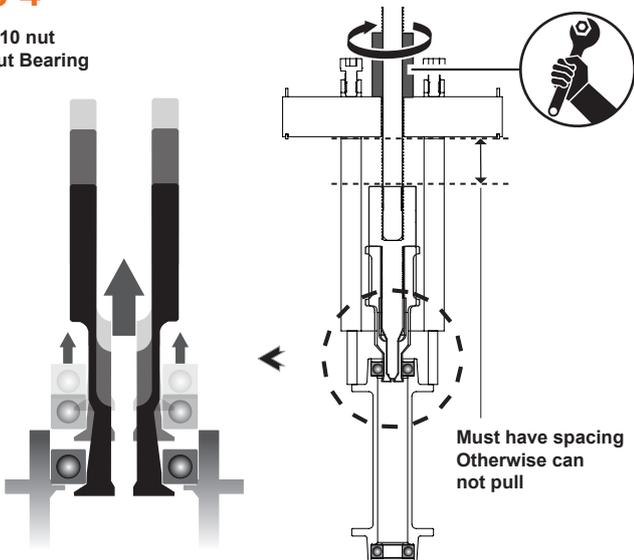

#### Step 5

Part Removal  
Extraction step complete

